



# MARSH TACKY CARBON X.T. OUTRIGGER INSTRUCTIONS

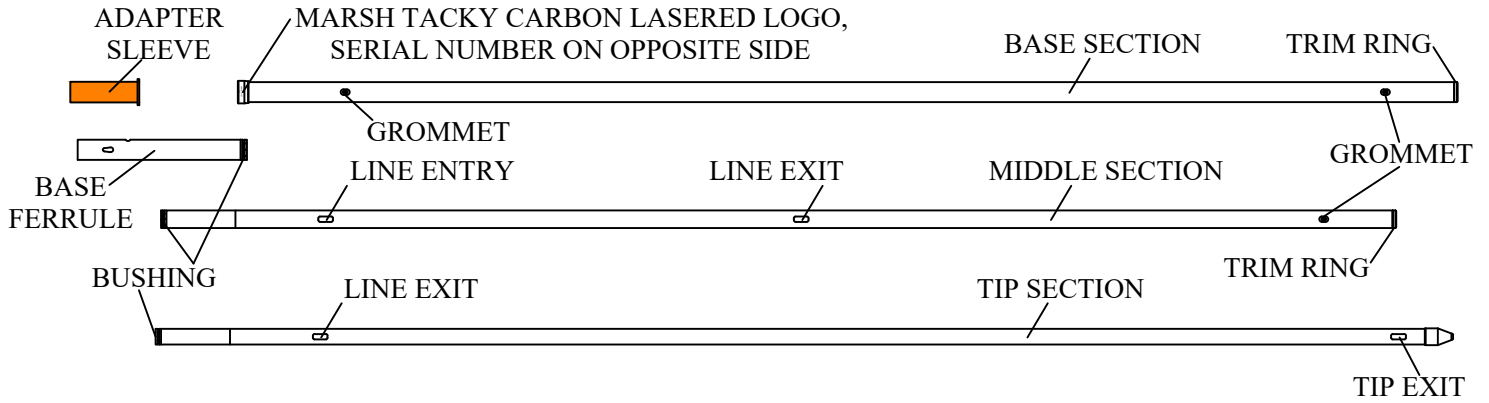


## ASSEMBLY:

YOUR OUTRIGGERS ARE SHIPPED UNASSEMBLED. ASSEMBLY WILL REQUIRE TIGHTENING SIX TITANIUM 8-32 X .5 INCH SCREWS PER OUTRIGGER WITH THE PROVIDED  $\frac{9}{64}$ " HEX KEY.

STEP 1 - BEGIN BY SLIDING THE BASE FERRULE INTO THE BASE SECTION UNTIL THE BUSHING BOTTOMS OUT ON THE GROMMETS.

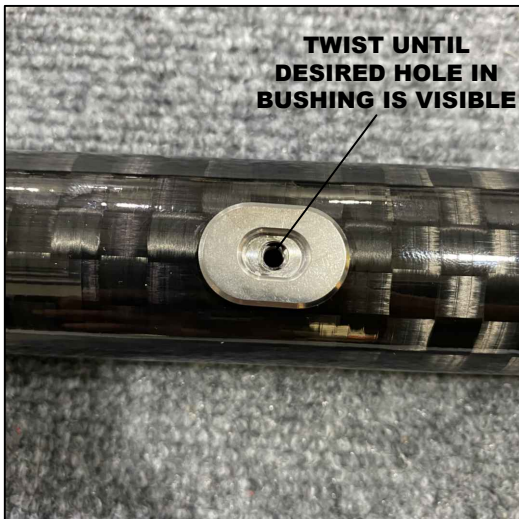

STEP 2 - EACH BUSHING IN THE OUTRIGGERS HAS PRE-DRILLED AND TAPPED HOLES EVERY 45° SO THAT YOU CAN SET THE ORIENTATION OF THE ENTRY/EXITS TO WHAT'S NEEDED FOR THE RESPECTIVE SIDE, PORT OR STARBOARD. IF YOU ARE UNSURE OF YOUR BOAT'S SETUP, WE SUGGEST TRYING 45° (HALFWAY BETWEEN DOWN AT THE WATER AND BACK AT YOUR BAITS) FIRST.

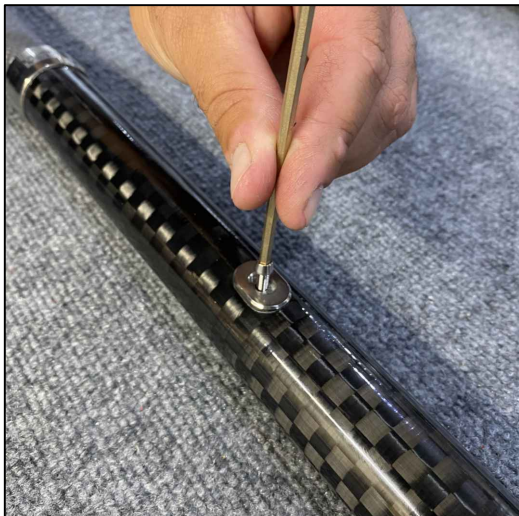

STEP 3 - TIGHTEN THE SUPPLIED 8-32 X 0.5 INCH TITANIUM SCREWS THROUGH THE GROMMETS AND INTO THE DESIRED HOLES IN THE THREADED BUSHING