



MARSH TACKY CARBON X.T. OUTRIGGER INSTRUCTIONS

ASSEMBLY (CONTINUED):

STEP 4 - YOU MAY NOW BEGIN ASSEMBLING THE MIDDLE AND TIP SECTIONS OF YOU OUTRIGGER USING THE SAME PROCESS AS SHOWN IN STEPS 1-3. BEGIN BY SLIDING THE MIDDLE SECTION INTO THE BASE SECTION UNTIL THE BUSHING BOTTOMS OUT ON THE GROMMETS.

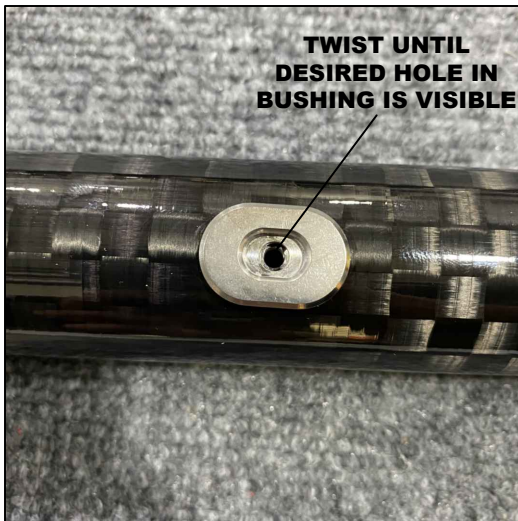

STEP 5 - ROTATE THE SECTION UNTIL THE DESIRED HOLE IN THE BUSHING IS VISIBLE THROUGH THE HOLE IN THE GROMMET.

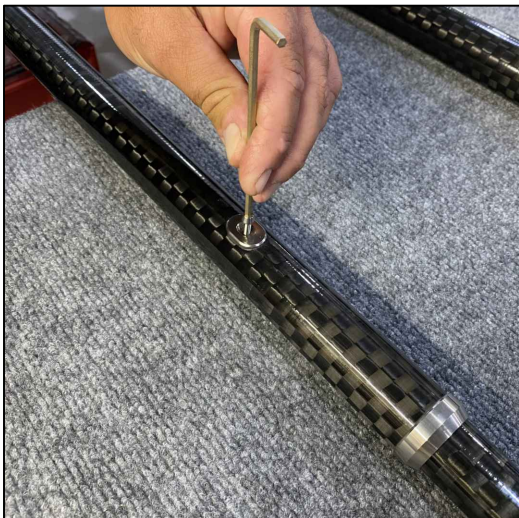

STEP 6 - TIGHTEN THE SUPPLIED 8-32 X 0.5 INCH TITANIUM SCREWS THROUGH THE GROMMETS AND INTO THE DESIRED HOLES IN THE THREADED BUSHING. REPEAT THIS PROCESS FOR THE ASSEMBLY OF THE TIP SECTION INTO THE MIDDLE SECTION.